


The Original RIBBON® Rack

IDSA National Design Award Winner
Permanent Design Collection - MUSEUM OF MODERN ART

MOUNTING INSTRUCTIONS


Contractor-supplied materials needed:

- 1-1/2" wood block (2x4)
- #3 rebar or 7/16" D bolt for anchors (2 required)
- Cement
- Level

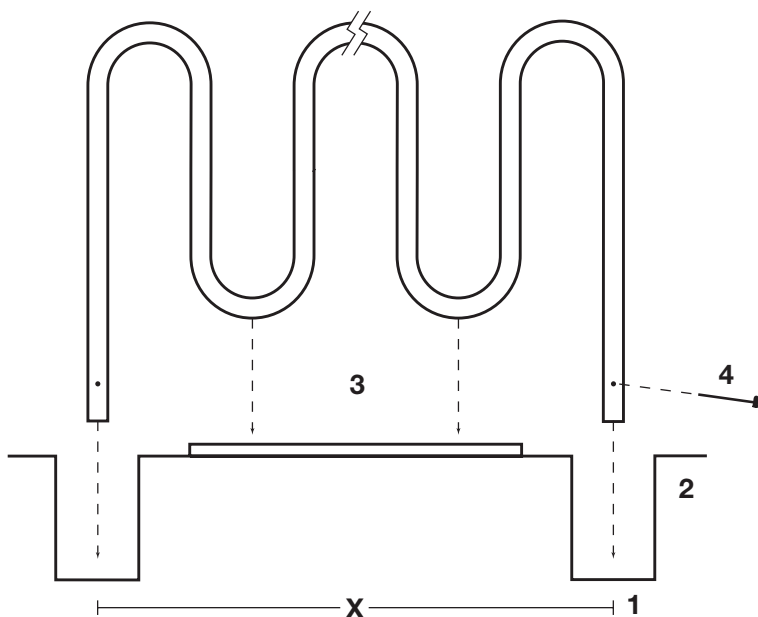

- 1 Measure centerline of end post to centerline of end post to determine spacing for footings (holes; see chart).
- 2 Prepare footings (holes) approximately 8" wide by 12" to 48" deep, depending on expected frost conditions at installation site.
- 3 Use 1-1/2" high wood block for spacing between the lower U-bends of the rack and the ground.
- 4 Place anchoring bolts through holes near the bottom of each end of rack.

Model #	X = Approx. Spacing
RB 05	3 feet
RB 07	5 feet
RB 09	7 feet
RB 11	9 feet

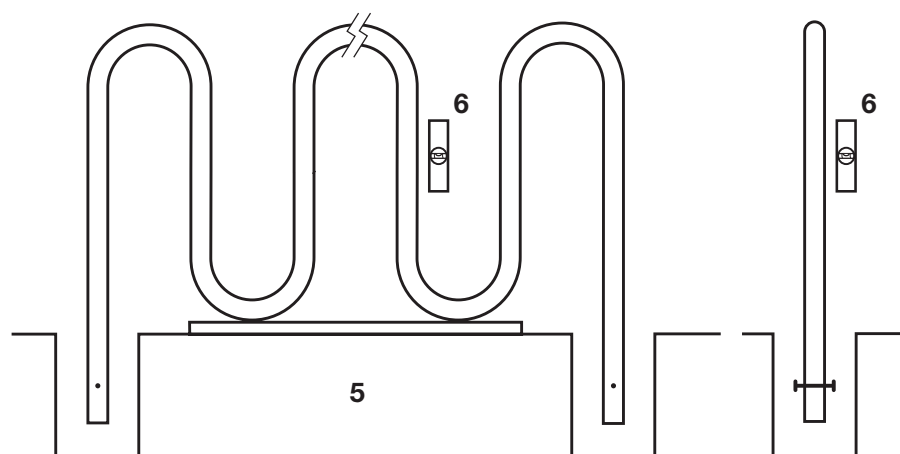

- 5 Place Ribbon® Rack in prepared holes, making sure lower U-bends are resting on the 1-1/2" high wood block.
- 6 Pour in the cement and level the rack.
- 7 Support the rack until cement is dry and remove wood block.

RIBBONRACK.COM 212.505.6500 INFO@RIBBONRACK.COM

Brandir International, Inc. 521 Fifth Avenue, 17th Floor, New York, NY 10175-1799 USA ©2025